

# AirportInfo - Manuel

Antoine Dautry

18 avril 2020




## Table des matières

<b>1 Français</b>	<b>2</b>
1.1 Fonctionnalités . . . . .	2
1.1.1 Pour débiter . . . . .	2
1.1.2 Clairance . . . . .	3
<b>2 English</b>	<b>4</b>
2.1 Features . . . . .	4
2.1.1 getting started . . . . .	4
2.1.2 Clearance . . . . .	5

# 1 Français

## 1.1 Fonctionnalités

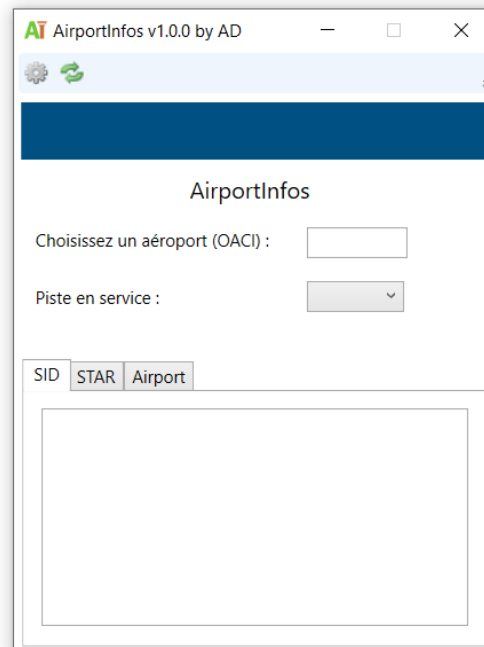


- Liste des pistes par aéroports
- SID, STAR par piste
- METAR de l'aéroport sélectionner

### 1.1.1 Pour débiter

Au premier lancement du logiciel, il vous faut ouvrir la page des paramètres puis sélectionner le chemin du dossier NavData de l' AIRAC Navigraph VasFMC. Cliquez ensuite sur "Valider".

De retour sur la page principale, cliquez sur l'icône de synchronisation. Et c'est tout ! Entrez ensuite le code OACI puis appuyez sur "Entrer". Les pistes, les SID, STAR et le METAR de l'aéroport seront alors chargés.


### 1.1.2 Clairance

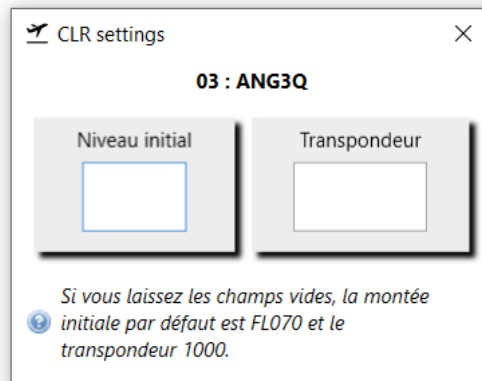

Quand vous double-cliquez sur une SID, une fenêtre s'ouvre. Entrez si vous le souhaitez le niveau initial et le code transpondeur (par défaut FL070 et 1000). Appuyez sur "Entrer" pour changer de champs et réappuyez sur "Entrer" lorsque vous êtes sur le champs transpondeur, cela copiera dans le presse-papier la clairance de départ. La fenêtre se fermera toute seule.

## 2 English

### 2.1 Features

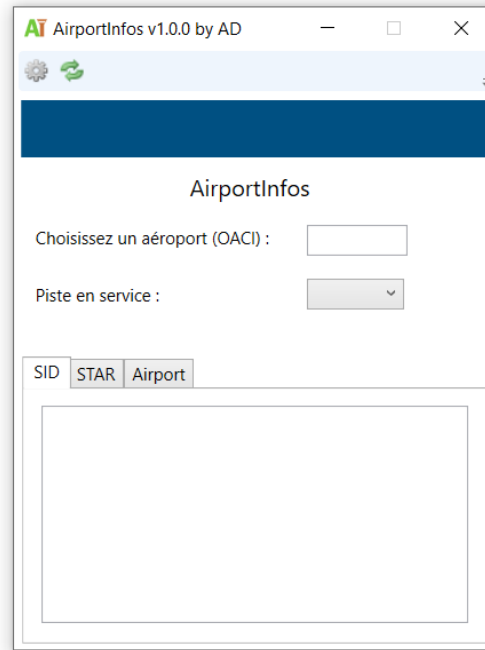


- See the runways of an airport and their information (lengths, ILS or not, ...)
- See the SID/STAR of the selected runway
- Consult the METAR of the selected airport (3 sources available for METARs : IVAO, NOAA, VATSIM). METAR can be reloaded by clicking on it, otherwise it reloads every 30 minutes.

#### 2.1.1 getting started

The first time the software is launched, open the settings page and select the path to the NavData folder in the AIRAC Navigraph VasFMC. Then click on "Validate". Back on the main window, click on the synchronization icon. And that's it! Then enter the ICAO code and press "Enter". The airport's runways, SID, STAR and METAR will then be loaded.

### 2.1.2 Clearance

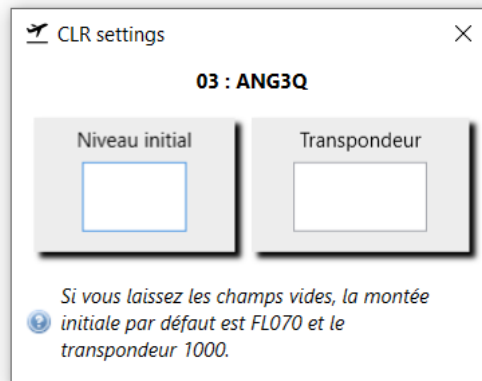

When you double-click on a SID, a window opens. Enter the initial level and the transponder code (default FL070 and 1000) if desired. Press "Enter" to change fields and press "Enter" again when you are in the transponder field, this will copy the start clearance to the clipboard. The window will close by itself.